Contents

Short overview.....2

Preface.....3

Information about this user manual.....3

Intended use.....3

General safety instructions.....4

Important safety instructions.....5

Features.....6

Startup.....7

Handling and operating.....9

Automatic shutoff and shutting down.....11

Cleaning.....12

Storage.....14

Disposal.....15

Frequently Asked Questions.....15

Specifications.....16

aqua2go

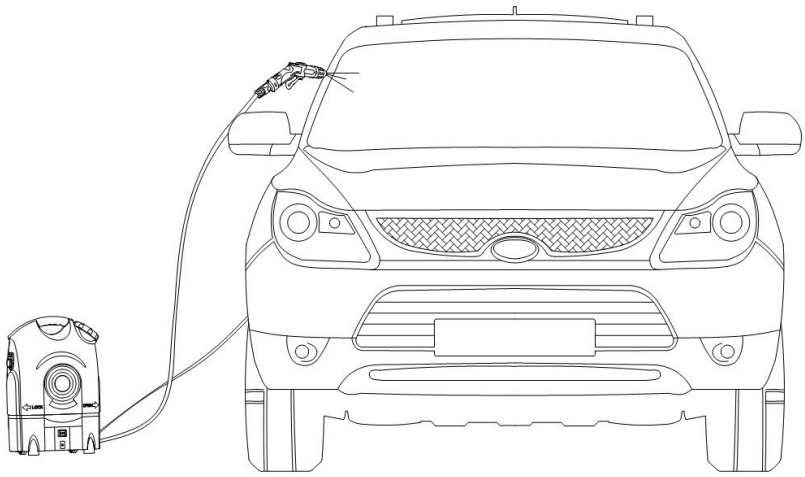

- Low water consumption and high water pressure
- Energy saving and environmental friendly
- Portable, durable and safe
- Cleaning around the house: bathroom, sinks, pets and garden
- Perfect for camping, boating and any outdoor activities

Preface

Dear customer,

With the purchase of this device you have opted for a quality product con cerning the state-of-the-art with regard to technology and functionality.

Please read this information thoroughly to become quickly familiar with the Mobil'eau, enabling you to fully enjoy its functions.

Your device will serve you many years if properly cared for and maintai ned.

We hope you have a lot of fun with your new Mobil'eau.

Information about this user manual

This user manual is part of the Aqua2go (in the following "device") and provides you with important information about the start-up, safety, intended use and the care of the device.

The user manual must always be available at the device. It must be read and the contained instructions must be followed by any person commissi oned with the operation, the repair and/or cleaning of the device.

Store this user manual safely and if this device is passed on or sold to sub sequent owners pass the manual along with the unit.

Intended use

The device is intended only to clean devices and spray water for non-commercial use in the outdoors.

Any other or additional use is considered as not intended.

WARNING

Danger from unintended use!

If the device is not used as intended and/or used differently than intended danger may be caused through the device.

- Use the device only as intended.
- Follow the procedures outlined in this user manual.

General safety instructions

To ensure the safe handling of the device, please follow the safety instructions below:

- Before using the device, inspect it for visible damages to the housing, the lid, the connecting cable and plug. Do not use a damaged device.
- Repairs of the device must only be done through authorized dealers. Improper repair may cause significant danger to the user. Furthermore, the warranty becomes void.
- Do not remove cover plate of attempt to disassemble your machine. This will void all warranties and may cause serious injury.
- To meet safety requirements only use manufacturer's recommended (replacement) parts.
- Persons who due to their physical, mental of motor abilities are not able to safely operate the device may use the unit only under supervision of or instruction by a responsible person.
- This is not a toy. Children are only allowed to use the device when supervised.
- Always pull the power cable by its power plug and not by the cable itself.
- Do not carry the device by the power cable.
- Turn off all controls before unplugging.
- Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the cleaner plate.
- Do not fill the water container with anything but water or you will void the warranty.
- Do not use without water filter in place.
- Do not leave the device when plugged in. Unplug from power when not in use and before maintenance of the machine.
- Keep nozzle free of obstructing objects. Do not use machine when nozzle clogged; keep free of dust, lint, hair of anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from moving machine parts.
- Do not direct the water jet toward the device itself, electrical parts or towards other electrical equipment.
- Do not alter the original diameter of the spray head nozzle.
- Discharge residual pressure before disconnecting the Mobil'eau spray hose.
- The device is not to be used with chlorine based type cleaners or any detergents.
- Never submerse the device in water.
- Do not allow the system to freeze. Always empty and store indoors. Freezing will damage pump and water lines.
- Always use the recommended 8A fuse for your machine. Any other may cause damage to your machine and vehicle.
- Do not spray water directly at your or someone else's eyes or mouth.

Important safety instructions

When you use the appliance, basic precautions should always be followed:

- Do not fill with gasoline or any other flammable liquid, serious injury may occur.
- Know how to stop the product quickly. Be thoroughly familiar with the controls.
- Do not operate the product when fatigue or under the influence of alcohol or drugs.
- The cords, wires and/or cables supplied with this product may contain chemicals, including lead or lead compounds. Always wash hands after using.
- Damaged high pressure hoses can burst and can cause a potentially hazardous situation or injury. High pressure hoses should not be kinked, crushed, twisted or damaged in any way. Should this occure, repllace the high pressure hose.

Use water of temperature at 0°C to 30°C only.

Features

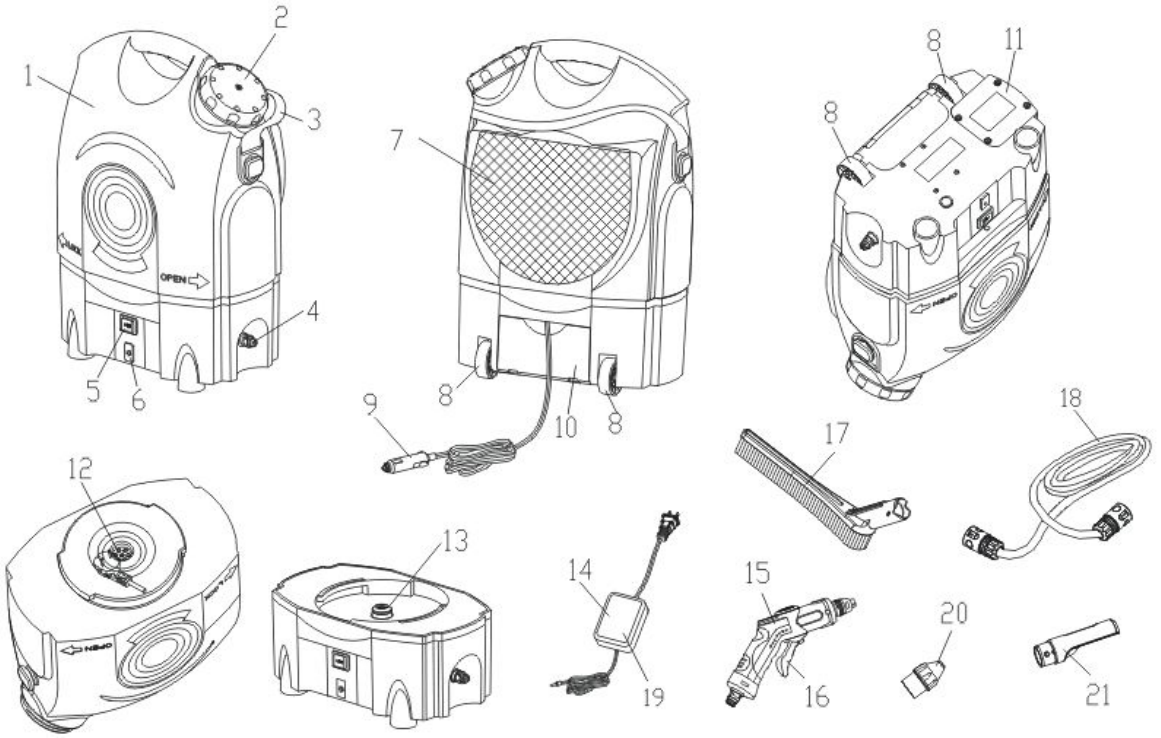

1. Water tank
2. Lid
3. Lanyard
4. Hose inlet
5. ON/OFF switch
6. Inlet for charger
7. Mesh storage department
8. Wheels
9. Power cord
10. Cover for powercord
11. Cover for battery
12. Water outlet
13. Water inlet
14. Charger
15. Spray nozzle
16. Trigger lock
17. Brush head
18. Hose
19. Indicator (turns from RED TO GREEN when battery is fully charged)
20. Adjustable nozzle
21. Shower head

Startup

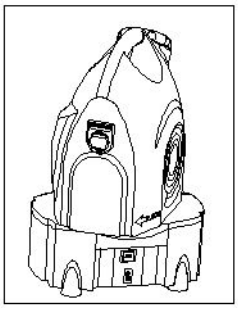

Take off the water tank.

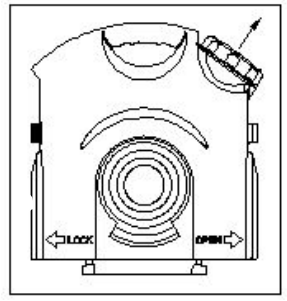

Turn lid counterclockwise to remove lid from tank.

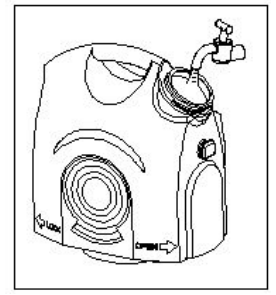

Fill tank with fresh water. **WARNING:** Temperature at 10°C to 30°C

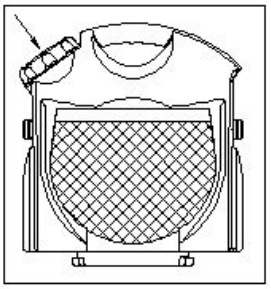

Close lid by turning clockwise to secure into place.

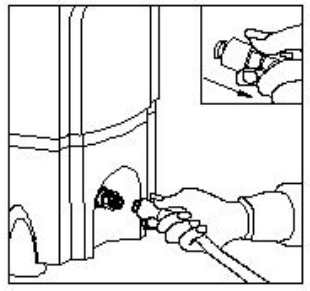

Attach hose to the unit by pushing down the quick coupling and inserting connector firmly.

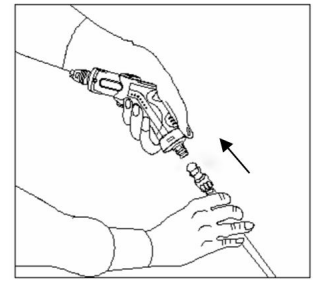

Connect hose to the spray gun by pushing down the quick coupling and inserting connector firmly.

Spray Gun Assemble

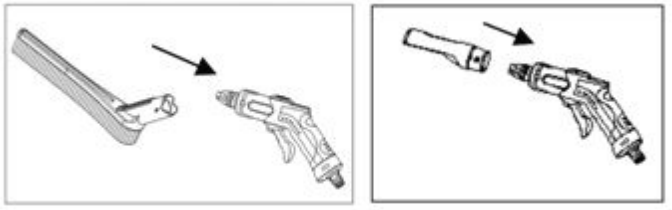

Connect the Brush/Shower Head to the spray gun.

Pushing the Brush/Shower head to the spray gun firmly after aim the salient points at the Brush/Shower Head with the holes at the spray gun

AUTOMATIC SHUTOFF

THE AUTOMATIC SHUTOFF FEATURE:

When the trigger is released, the dynamic pressure shuts the motor off automatically. When the trigger is pressed, the pressure drop automatically activates the motor and pressure is formed once again with a slight delay. To ensure correct automatic shutoff operation, the time interval between trigger release and engagement must not be less than 5-10 seconds.

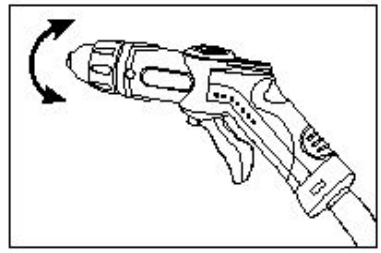

Pull trigger on spray gun and adjust water as needed.

SHUTTING DOWN YOUR PORTABLE CAR WASHER:

1. Place the switch in the OFF position.
2. Pull trigger on spray nozzle to relieve any water pressure in hose or spray nozzle.
3. Disconnect hose from unit.
4. Disconnect nozzle from hose.
5. Press spray nozzle to remove excess water.

Handling and operating

WARNING:

Disconnect the power cable whenever your vehicle's engine is turned off for extended period of time. The power does not turn off after switching off the engine in certain vehicles. If the power plug is left connected, vehicle's battery may run down or become damaged.

Proceed as follows:

When using cigarette lighter

- Plug the power cable into the cigarette lighter or power port.
- For power switch the ON/OFF switch to II (Cig Ltr)

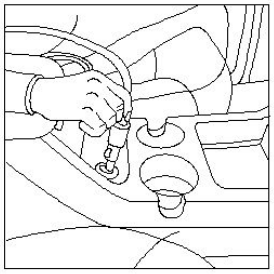

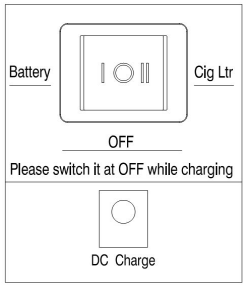

NOTE:

Some vehicles require that ignition be in accessory position.

When using the battery of the Aqua2go:

- No power supply is needed
- For power switch the ON/OFF switch to I (Battery)

NOTE:

Fully charging the battery will take 6 to 8 hours.

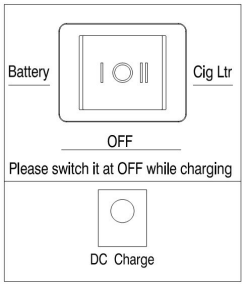

- Purge air from system.

To purge air, turn device on (diagram 2). For this you can use both switch I and II. Point nozzle into water tank and squeeze lever until steady stream of water exits hose (diagram 3).

Diagram 2

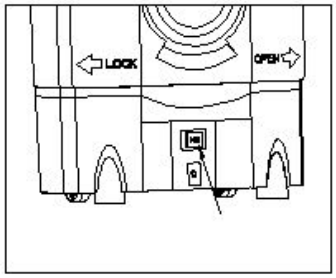

Diagram 3

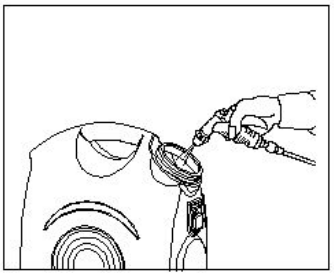

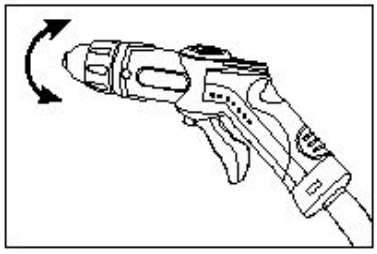

To adjust the water jet, pull the trigger on the spray gun and adjust water by turning the nozzle.

NOTE:

With normal use, air can get trapped in the hose. We recommend the following steps to purge the air out of your system and get the maximum amount of pressure out of your new Aqua2go.

Follow these steps after each time you refill your tank:

1) Fill the tank with water.
2) Connect the hose to the unit.
3) Connect the power cord to the unit.
4) Plug the power cable into cigarette lighter or power port.
5) Direct the hose into the tank, without the nozzle attached.
6) Turn the power on and run the device for approximately 30 seconds or until a steady stream of water is present.
7) Turn off the power.
8) Connect the nozzle to the hose.

NOTE:

Before starting to use the device please make sure the capacity of the car/boat battery is sufficient. Otherwise you might have a problem starting your car or boat afterwards.

When using the Aqua2go for more than 30 minutes we advise you to check the battery carefully.

Automatic shutoff

When the trigger is released, the dynamic pressure shuts the motor off automatically. When the trigger is pressed, the pressure drop automatically activates the motor and pressure is formed once again with a slight delay. To ensure correct automatic shutoff operation, the time interval between trigger release and engagement must not be less than 5-10 seconds.

Shutting down

For shutting down your Aqua2go, please follow the next steps:

6. Place the ON/OFF switch in the OFF position.
7. Pull trigger on spray nozzle to relieve any water pressure in hose or spray nozzle.
8. Disconnect hose from unit.
9. Disconnect nozzle from hose.
10. Press spray nozzle to remove excess water.

Cleaning

WARNING:

Always disconnect the plug from the power supply before any maintenance is started.

- Water filter

Inspect the water filter before filling the water. Clean water filter when necessary. This can be done by holding it under the tap.

- Nozzle

A clogged nozzle will cause the operating pressure to be too high causing the portable washer to surge. If this happens turn the Aqua2go off and unplug pressure washer. Then clean the nozzle following the steps below:

1. Pull back the connection on the hose and detach the nozzle from the hose.

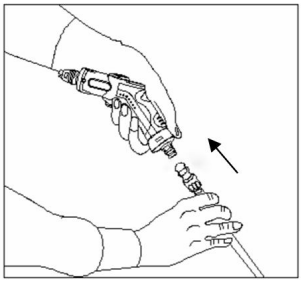

2. Clean the nozzle with the delivered nozzle cleaning tool. Remove any dirt from the nozzle and rinse thoroughly.

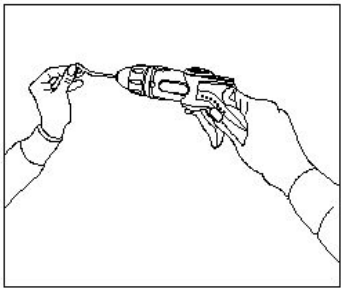

Repeat steps 1 and 2 when the pressure is still too high.

- Lubrication

No lubrication is required for this pump. Silicone grease may be added to hose connector O-rings if connecting becomes difficult.

Add some silicone grease to the metal part of the spray nozzle if it has not been used for a long time.

- Replace fuse

Unscrew the end of the power cord adaptor to remove the old fuse. Discard it and replace it with a new fuse.

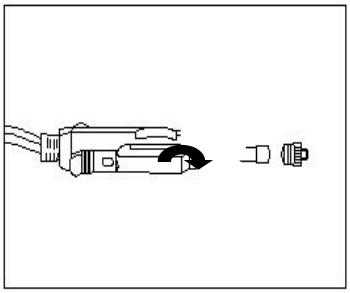

FOR BATTERY:

1. Please always keep the battery fully charged.We recommend charging the battery full after each use to ensure the maximum battery life,First time in use,charging it before using.
2. Please note that the batteries charger will reduce over time if stored without use.Ideally charge the battery at least once every three month to ensure it remains in a fully charged state.
3. Check the battery clamps regularly to find out if it is loose, corrosive or defective or leakage.Maintenance maybe required.
4. Please always store the battery/Washer/Power Pack away from high temperatures or flammable &explosive goods.
5. To prevent electric shock,please use an insulated tool or glove when fixing or maintaining.
6. Please contact the factory or distributor if there is any defect of the battery. Do not disassemble by oneself.
7. Do not clean the battery by using organic solvents or it may damage the battery.

Storage

This Aqua2go should be stored in such a way that it is protected from freezing. Do not store this device outdoors or at an area where temperatures will fall below 0°C (32°F). This can cause extensive damage to this unit and void the warranty. Before storing, follow the steps below to drain the water from the machine:

1. Turn off the Aqua2go and squeeze the nozzle lever to release pressure. Remove and squeeze nozzle to drain water from the nozzle. Empty water from tank. Turn the device on and run it for approximately 30 seconds without the nozzle.
2. Detach high pressure hose. Elevate one end and allow water to drain from the hose.
3. Remove and place hose, nozzle and power cord in mesh storage compartments.
4. If unit must be stored under freezing condition or will be stored for more than 30 days, a pump winterizer/protector or a non-toxic RV anti-freeze can be used to prevent freezing and reduce mineral deposits.

Storing with anti-freeze:

1. Pour approximately 3 liters (1/2 gallon) of RV anti-freeze into the tank.
2. Connect high pressure hose, nozzle, and power cord.
3. Turn unit on, squeeze lever until a steady stream of RV anti-freeze is present.
4. Turn unit off, squeeze nozzle lever to release pressure.
5. Remove and place hose, nozzle and power cord in mesh storage compartments.

WARNING:

Use only RV anti-freeze! Any other anti-freeze is corrosive and can damage pump and void warranty.

Using Aqua2go after storing with anti-freeze:

1. Drain RV anti-freeze. (follow steps 1 and 2 from Drain water from system)
2. Run 1 tank of fresh water through system before using and ensure all anti-freeze is purged from system.

Disposal

Electric and electronic end-of-life devices often still contain valuable materials. Howevery, they also contain hazardous substances which were required for their proper function and safety.

If disposed of with regular household waste or treated incorrectly they can pose a risk to human health and the environment.

NOTE:

Use the collecting station in your municipality to return electrical and electronic end-of-life devices for recycling. Obtain the information required, if necessary, from your city hall, your waste disposal company or your dealer.

Render the device unusable before disposal. Make sure your end-of-life device is stored safely away from children until hauled away.

Frequently Aked Questions

1. Water pump does not work.

- Check if the power cord is attached properly.
- Check the vehicle's battery and/or the cigarette lighter socket.
- Check on the fuse of the cigarette lighter plug and socket.

2. No water sprays out when I start the water pump.

- Check if the nozzle is not clogged.
- Check if the water inlet is not clogged.
- Check if the water hose is not bent.

If you cannot solve the problem following the FAQ above, please contact the customer service.

You will find the contact information on the back of this manual.

Specifications

Dimensions	350 x 230 x 535 mm
Gross weight	7,8 KG
Volts	12V (DC)
Power consumption	60 watt
Capacity	17 liters
Pressure (PSI)	43,5 – 130,5
Length hose	6,0 meters
Length power cord	3,0 meters

Aqua2Go

is fully in conformity with the essential requirements of the following EU-directive:
2002/95/EC
2004/108/EC
2005/618/EC

This declaration is based on the full compliance of the products with the following European standards:
EN 61000-6-3:2007
EN 61000-6-1:2007
IEC 61000-4-2 :2001
IEC 61000-4-3 :2006